


* ALWAYS TEST THE UNIT ON SITE BEFORE INSTALLATION TO AVOID RE-STOCKING FEE * See full T&C's on our website

4G Antenna

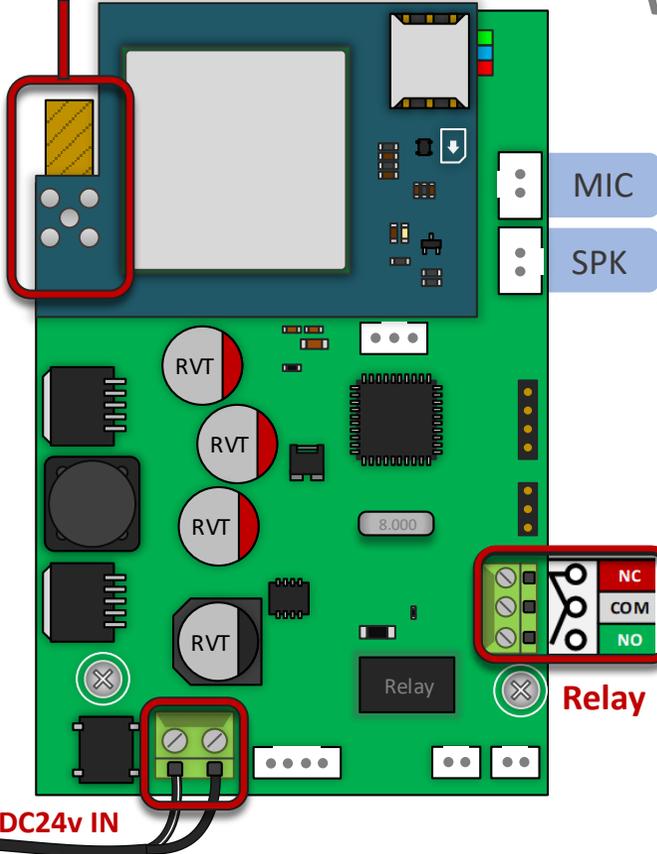


Wiring Connections

PCB Status LEDs

- SOLID RED = PCB POWERED ON
- SOLID RED + BLUE FLASHING = SEARCHING
- SOLID RED + BLUE FLASHING + GREEN FLASHING = SUCCESSFULLY CONNECTED

Keypad

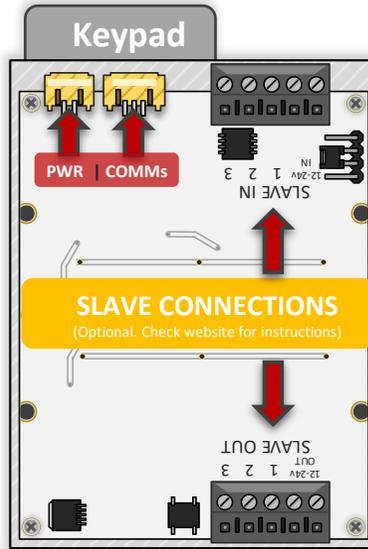


SLAVE CONNECTIONS


(Optional. Check website for instructions)

SIM ORIENTATION

ALWAYS ensure the system is switched **OFF** when adding or removing your SIM card and ensure the orientation is correct.

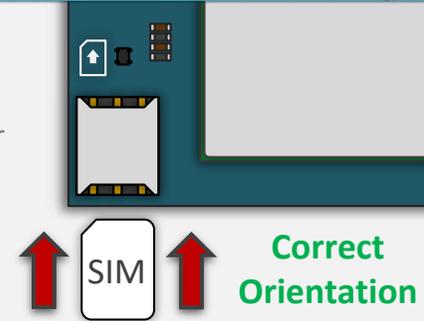

CONNECTION TO NETWORK

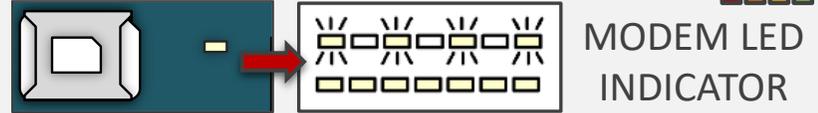

4G: Quick Flashing = Standby | Constant ON/OFF = Searching


SYSTEM PROGRAMMING VIA SMS




Function	CMD String (SMS)
Manually trigger, latch or unlatch relay by SMS. <small>X = Relay function. (1 = Trigger relay, 2 = Latch relay, 3 = Unlatch relay)</small>	1234#X#
Check Intercom Status <small>(min signal level required for full operation is 10)</small>	*20#
Check stored numbers <small>O = dial out number, I = dial in number. N = Another message, E = end of message.</small>	*21#
Check Relay Status	*22#
Check Stored Keypad Codes	1234#25#
Store dialling out numbers (3 MAX) <small>X = sequence number dialled 1-3 number = phone number (max 14 digits)</small>	9999#11Xnumber#
Change Relay time <small>Time = 1-99 seconds</small>	9999#50time#
Add Caller ID number (max 25) <small>(max 14 digits long)</small>	9999#72number#
Add Keypad Code (max 25) <small>Code = 4 digits, Time = 1-10 seconds Use 0 seconds for latching code</small>	9999#811code#time#
Set APN for connecting to 4G network. <small>APN Name = Networks APN (e.g. 9999#97wap_vodafone.co.uk#)</small>	9999#97APNname#
Factory Reset (Default Everything)	9999#999#

Send SMS direct or use the custom built app for ease. **PTO**

ALTERNATIVE WIRING EXAMPLE

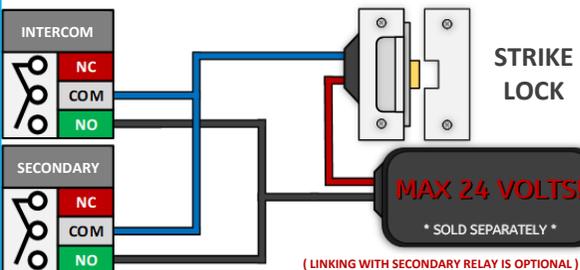

ALTERNATIVE WIRING EXAMPLE

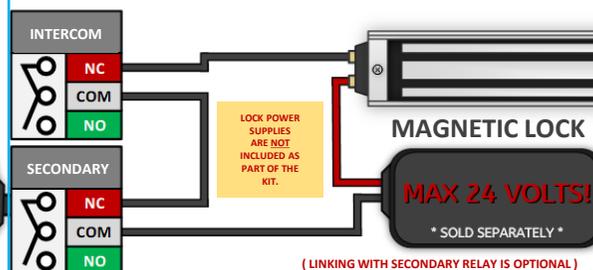




(LINKING WITH SECONDARY RELAY IS OPTIONAL)

(LINKING WITH SECONDARY RELAY IS OPTIONAL)

* ALWAYS TEST THE UNIT ON SITE BEFORE INSTALLATION TO AVOID RE-STOCKING FEE * See full T&C's on our website


1 Download the programming/user app. 'AES Lite' (QR Codes below)

Tip: Use the **i** symbol for detailed information.
Note: The app will be grey until you select your product type and 'Finish' initial setup.

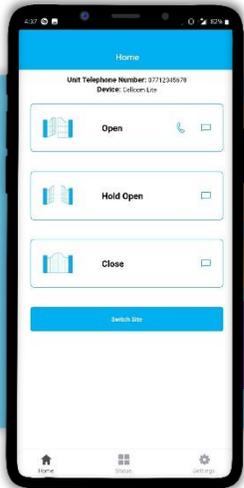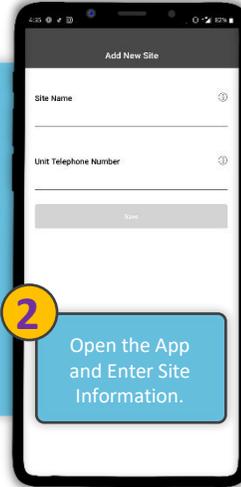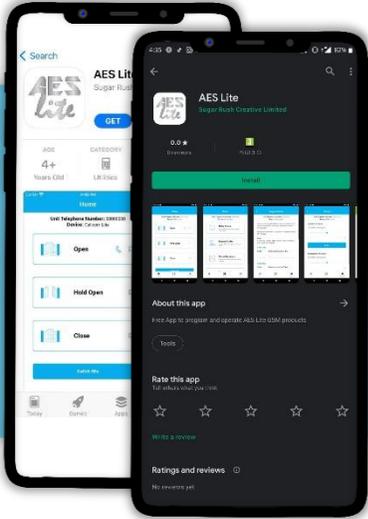

- Momentary Trigger**
- Hold Open Permanently**
- Close after Holding**
- Switch to another site / intercom.**

- Check if the relay is open or closed at any time, remotely.
- Check all stored numbers saved within the system memory.

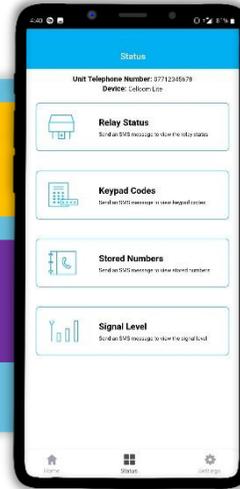

- Check all stored keypad codes saved within the system memory.
- Check the signal strength to the network at any time. (1-31)

- Adjust Volumes, Security Passcodes & the Relay's Trigger Time.
- Program Dial Out numbers, APN details & more.
- Program Caller ID numbers to activate they relay when the unit is called.
- Add Keypad Codes

